



Unfold the base then fold the kick flaps under the base to strengthen the sides.

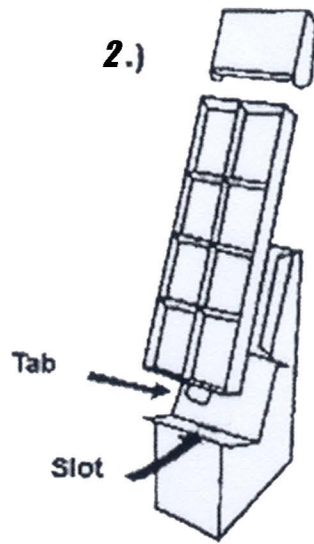

Pull out the tab in the bottom of the tray and insert it into the slot in the base. Then insert the header as shown on the top of the display.

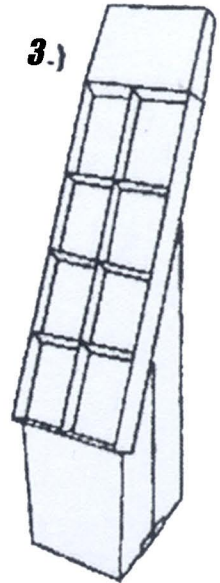

Inserting the Header:



Slide both tabs into its corresponding slot at the same time
(makes it easier to assemble)